


Installation instruction for the transaction window

1.

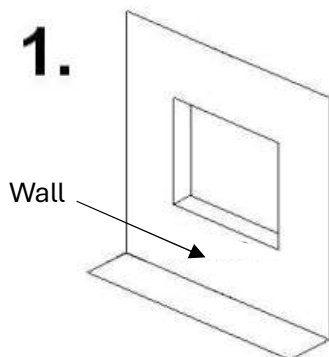


Preparing the opening

Opening width should be greater than the height of the transaction window of 20mm


Opening height should be greater than the height of the transaction window of 20mm

2.

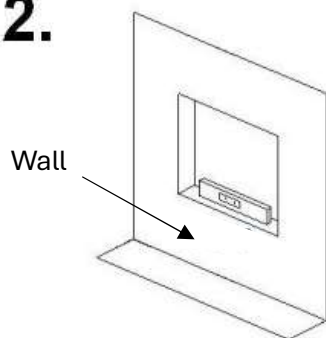

Check the vertical and horizon in the prepared opening.


3.

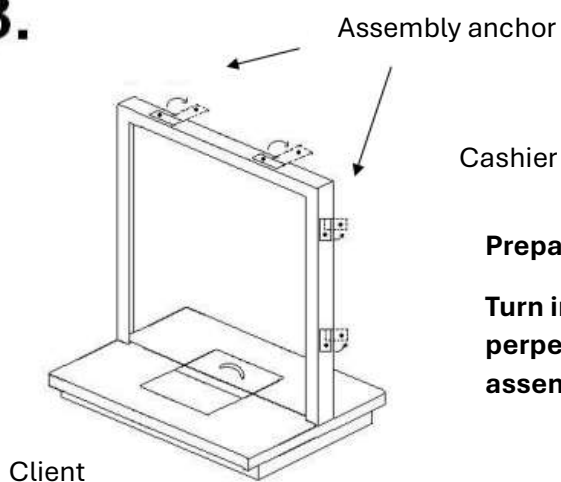


Preparing transaction window

Turn in a direction perpendicular to the frame assembly anchor.

4.

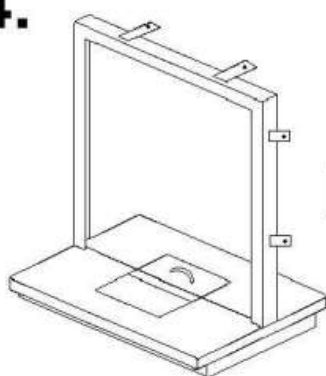

Cashier

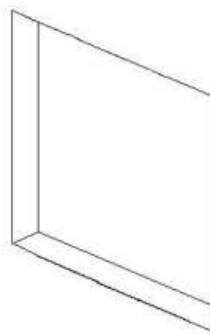


Client

Installation


Set the transaction window in the opening so that the mounting clearances were equal on both sides (20mm) and the upper top clearance was 20mm

WARNING!!!

**DO NOT LIFT THE WINDOW BY THE
TABLETOP!!!**

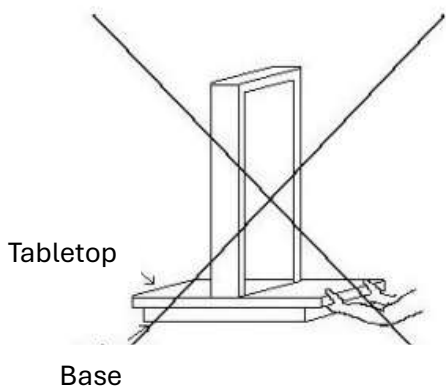


WRONG!

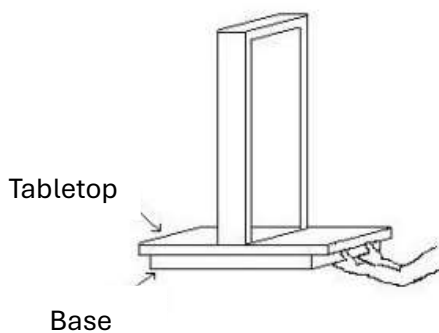

OK!


5.

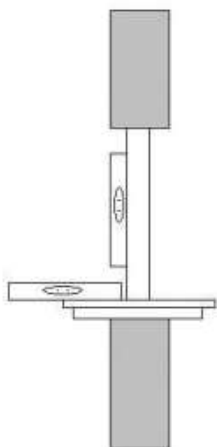

After setting the transaction window
check The vertical and horizontal
position

Transaction window should be set in
the axis of the wall


6.

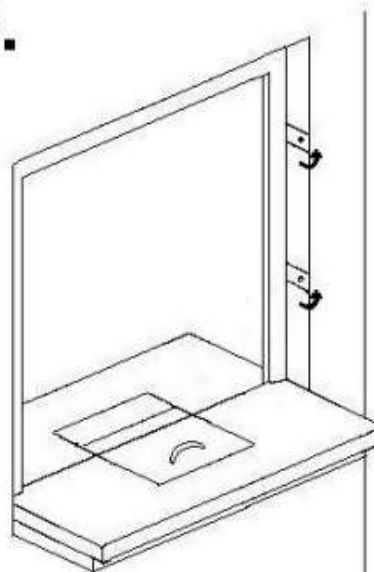

Fold back slightly assembly
anchor towards the wall


7.

Wedges

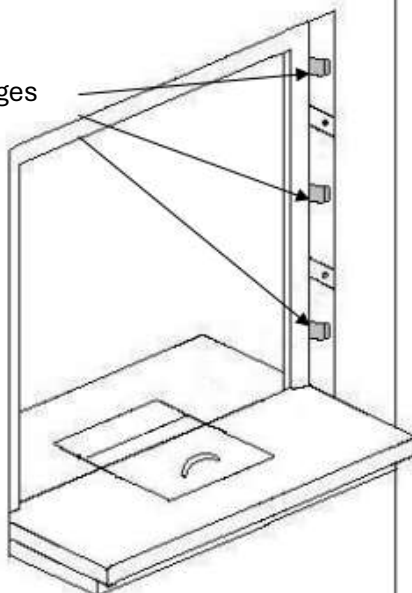

Determine the position of the
transaction window with cleat.


8.

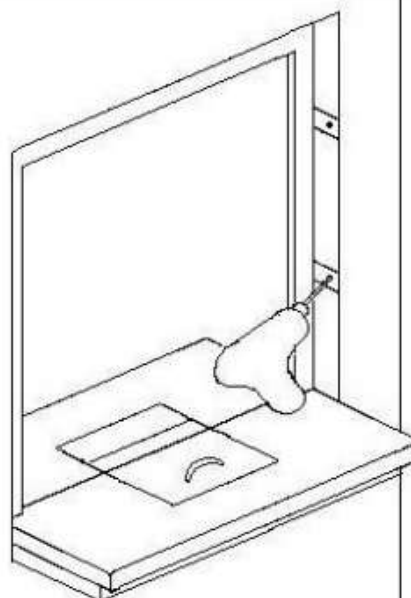

Anchors have a hole $\phi 10$.


After drilling the holes in the wall
hammer in or screw mounting
pins (or dowels)

9.

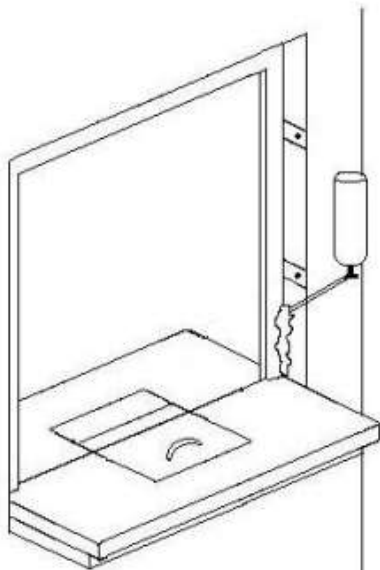

**Fill the gap around the
transaction window with the
assembly foam**

10.

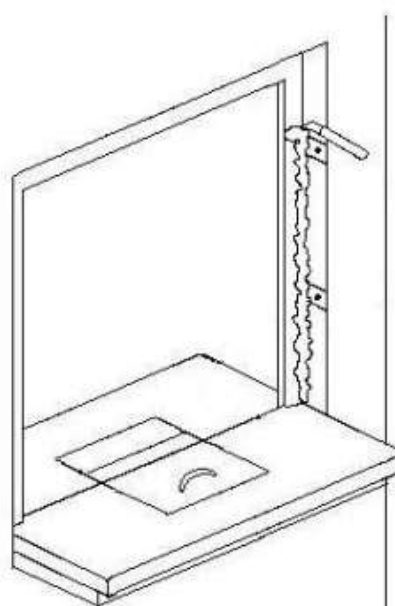

**After drying the foam cut off
the excess with a knife**